




# Installing Bulk Head Fitting in a Rain Barrel

**STEP ONE:** Drill 7/8" Hole in Rain Barrel.



**STEP TWO (Outside Barrel):**

Insert small side of fitting (with one rubber washer) into 7/8" drilled hole. Fitting and rubber washer should fit snugly against rain barrel.

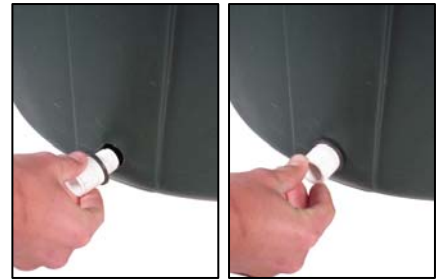

**STEP THREE (Inside Barrel):**

•Slide rubber washer over fitting so that it fits snugly against inside of rain barrel.



•Thread metal washer onto threads with smooth side against inside of rain barrel.



•Hand tighten.

•Hold metal washer in place with channel locks while hand tightening fitting from the outside.

**Installed Bulk Head Fitting:**

